
Upgrade Information

If you are upgrading the printer software only (not the entire WinIATE package) from a previous version of the printer software, the following upgrade procedure is recommended:

- If the **IATE_PRT** program is running, stop it (e.g., choose **Exit** from the **File** menu).
- Back up the **IATE_PRT.EXE** and the **PCFG** files from the WinIATE product directory where the previous version resides.
- Copy the new **IATE_PRT.EXE** file into the same directory, so that it replaces the previous version.
- Since the new version of the program replaced a previous version, it should be possible to start **IATE_PRT.EXE** using the same shortcut icon that was previously used to start the printer software.

Requirements

The 16-bit version of the printer program runs on any PC with Windows 95, 98, or NT, Windows for Workgroups, or Windows 3.1 or 3.11. The 32-bit version of the printer program requires Windows 95, 98, or NT. The PC must have a TCP/IP interface to a network through which it can communicate with the IATE Gateway.

For the 16-bit or 32-bit printer program in Windows 95, 98, or NT, the Windows TCP/IP network connectivity must be set up. For the 16-bit printer program in Windows for Workgroups, or Windows 3.1 or 3.11, a TCP/IP (Winsock) stack must be installed and set up.

For Windows 95 or 98, we recommend no less than 8 Mb RAM installed in the PC. For Windows NT, at least 16 Mb of RAM is recommended. A PC running Windows for Workgroups, or Windows 3.1 or 3.11, should have no less than 4 MB of RAM installed. Additional RAM may improve system performance.

A text editor or word processor that can read and write ASCII files will be required, in order to modify the printer program's configuration files. Suitable editors include Windows **Notepad**, DOS **Edit**, and other editors that can read and write text-only files.

Preparation

Before installing the Printer Software, it is important to properly set up the PC and install an InnoSys IATE Gateway on the network. Also, identify the Object Name that is defined for this printer within the Gateway configuration.

The LAN/WAN

The Printer Software communicates with the Gateway over a Local Area Network (LAN), or possibly a Wide Area Network (WAN), using TCP/IP. Ensure that Windows TCP/IP protocol support is installed and configured, and that the network is up and running, *before* trying to install or start the printer software.

If the printer program is to be used with an NT or UNIX gateway, the PC that runs the printer program must be able to establish TCP/IP connections to that NT or UNIX system. If the printer program is to be used with a Mac gateway, the PC must be able to establish a TCP/IP connection to a Mac that is running the IATEtcp software.

A **ping** utility can be used to check the required connectivity to the a UNIX or NT system that runs Gateway, or to the Mac that runs IATEtcp. To check connectivity, use **ping** with that machine's IP address or network name. For example, suppose that the IP address of the Gateway or IATEtcp machine is 192.0.1.18, and that its name on the network is gatehost.

Enter:

```
ping 192.0.1.18
or:
ping gatehost
```

and press the **Enter** key. The utility should report receipt of responses from the Gateway machine. If no responses appear, stop the **ping** utility and try it again once more, using the correct IP address. If there is still no response, check the IP addresses and any other configuration parameters on both sides of the connection.

In Windows 95, 98, and NT, the **ping** command can be entered on the command line in a DOS Prompt window. On a Windows 3.x or Windows for Workgroups PC, a **ping** utility may have been provided with the TCP/IP stack or by another party; or it may not be available. If **ping** is *not* available on the PC, and if the Gateway runs on NT or UNIX, then a suitable alternative is to use **ping** from the Gateway machine to check connectivity to the Windows PC.

If **ping** fails to establish connectivity to a Macintosh system, ensure that you specified the Mac where the InnoSys IATEtcp utility is running. (See the InnoSys Mac Gateway documentation for more information on IATEtcp.)

If you find that **ping** obtains responses when you specify the IP address, but fails to obtain responses when you specify the Gateway system by name, then the Windows PC is unable to locate the Gateway system by name. There may be a problem with the Windows TCP/IP name-resolution configuration on the network. Depending on how the system's network options are set up, the name-resolution options might be found in the **DNS** or **WINS** options in a **Network / TCP/IP** control panel; or else the name-resolution might use a **hosts** or **lmhosts** file. In Windows 3.1, 3.11, or Windows for Workgroups, check the TCP/IP stack's name-resolution configuration, which probably involves a **hosts** or **lmhosts** file. Connectivity to an external DNS or WINS server may also need to be verified. *These are Windows and office network configuration issues, outside the scope of this document. Problems in this area may best be investigated by personnel familiar with your Windows PCs and network.*

A successful **ping** test verifies basic connectivity, but does not ensure that the printer program can contact the Gateway. If the printer program fails to contact the Gateway, this may indicate that the installation or configuration of the printer program is not complete. For example, the printer program's `OBJECT_NAME` configuration item (discussed below) might not correctly specify the name of the Gateway, or might not specify a TCP/IP service name and an IATE printer object name that can be found in the Gateway configuration.

The IATE Gateway Name, Service Name, and Printer Object Name

In order to configure the Printer Software for operation, it will be necessary to know the name of the IATE Gateway host, the TCP/IP service-name by which to contact the Gateway, and an available IATE Printer Object Name that is specified in the Gateway's configuration. Obtain these names before beginning the printer program configuration process. These names will be specified in parameters to the printer program's `OBJECT_NAME` configuration directive, discussed in the **Configuration Directives** section of this document.

Note that these names are "case-sensitive", meaning that upper vs. lower case distinctions generally are significant. Whether a name contains all lower case, or a mixture of upper and lower case letters, make note of the name precisely so that you'll be able to establish the correct configuration with the `OBJECT_NAME` configuration directive.

The Gateway Host Name

For connections to an NT or UNIX gateway, the "Gateway host name" is the network name of the NT or UNIX system where the Gateway is installed.

For connections to a Mac gateway, the "Gateway host name" (from the printer program's perspective) is the name of the Mac running the IATEtcp utility, which is *not necessarily* the same as the Mac running the Mac IATE Gateway.

If you have already installed and configured WinIATE terminal software on the PC and successfully established its connection to the Gateway, then the Gateway name (or its numeric IP address) is shown in the terminal's **Link Configuration** item under the **File** menu.

Before proceeding, you may wish to verify connectivity to the Gateway host, by using the **ping** test described earlier.

The TCP/IP Service Name

The TCP/IP “**service name**” is the name associated with a TCP/IP network “port number” which the printer program uses in order to connect to the Gateway. This name is usually `ialcserver` in typical installations (usually associated with TCP/IP port #1413). For some installations the required service name is different.

If you have already installed and configured WinIATE terminal software on the PC and verified its connection to the Gateway, you may find the service name in the terminal’s Link Configuration item under the File menu.

If the required name is not already known from WinIATE configuration or other information, the procedure described in **Appendix D** may be used to determine the correct name for connection to an NT or UNIX gateway. The procedure for a Mac gateway with IATetcp is somewhat different and is not documented here — refer to Mac gateway and IATetcp documentation, and contact InnoSys for assistance if necessary.

The Printer Object Name

A printer **object name** must be created for each printer as part of the Gateway configuration process. See the Gateway documentation for information on how to configure object names for the Gateway. If a printer may take any available TA from a “*group*” of printer TAs which has been defined at the Gateway, then the printer program configuration will specify the name of the *group* in place of the object name.

A printer object name is different from a CRT object name. The printer program is not intended for use with CRT objects. The object name you specify in the printer program configuration should be listed as a printer object in the Gateway configuration.

Installing the Printer Software


Installation for Windows 95, 98, or NT

For Windows 95, 98, or NT systems, use the installer program provided with the WinIATE package to install the printer software along with the other WinIATE software components. The installer places shortcuts to all of the WinIATE software components together in the **InnoSys** folder which can be found under the **Programs** menu after installation.

After installing the software, proceed through the configuration and setup procedures described in the remainder of this document. Also, read the **Important Notes concerning the 16-bit and 32-bit versions**, on the next page.

Installation for Windows 3.1, 3.11, or Windows for Workgroups

Use the installer program provided with the WinIATE package to install the printer software along with the other WinIATE software components. The installer places all of the WinIATE software components together into the **InnoSys** program group. An icon for the printer program should appear there.

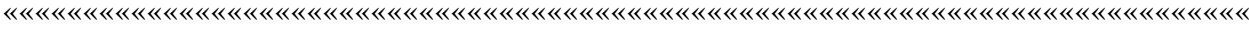

Important Notes concerning the 16-bit and 32-bit versions (November 1998)

Currently, the WinIATE installer will install the 16-bit version of the printer program, along with a beta version of the 32-bit printer program. When you double-click the installed shortcut icon for the printer program, this will start the 16-bit version. The 32-bit beta version is, currently, for experimental use only.

The 16-bit and 32-bit versions differ in some configuration characteristics as well as internal design. Although the 16-bit version remains current at this time, the 32-bit printer program will eventually supplant it for new installations for Windows 95, 98, and NT.

The 16-bit version is a single-threaded program designed for Windows 3.x and Windows for Workgroups, but it can also operate in Windows 95 and 98, and Windows NT. The 32-bit version is a multithreaded program designed specifically for Windows 95, 98, and NT.

Although the major design differences are internal, the 32-bit version also adds a few configuration options that the 16-bit program does not support. See, for example, the new print-control options discussed in the subsection **Special Print-Control Directives: to set orientation, font, etc.**, in the **Configuration Directives** section.

The 32-bit version also provides expanded support for ATB/ATB2 printers. The 32-bit printer program supports ATB/ATB2 printing on SABRE, SwissAir, Galileo, and KAL host connections. The 16-bit program currently supports ATB/ATB2 printing for SABRE and KAL, but not SwissAir or Galileo host connections. For details on the ATB-related configuration directives refer to the subsection on **Special Directives for use with ATB/ATB2 Printers**, in the **Configuration Directives** section.

If you wish to experiment with the 32-bit version, remember that it requires Windows 95, 98, or NT.

Command-Line Options

To examine or change the printer program's *command-line options*, you'll need to locate the printer program shortcut or icon, and edit its properties. Instructions for doing so can be found at the end of this section..

The printer program's *command-line options* are listed below:

-filename

Specifies the name of a configuration file.

Example: *-fTI885*

Each configuration file defines connection and printing parameters for one printer-object. Typically only one configuration file is specified, but more than one can be specified by placing multiple *-filename* options on the command line. Configuration options are explained later in this document.

-vlevel

Sets the message window debugging level, which controls the diagnostic messages that appear in the printer program window.

The *level* is specified in hexadecimal notation.

A typical example: *-v7f*

-llevel

Sets the log file debugging level, which copies diagnostic messages into a file named **plog.log**. This option might be used along with the *-v* option, usually with the same *level*.

Example: *-l7f*

-Vlevel

(Note the capital *-V*; this is different from the *-v* option.)

This sets the API debug logging level. API debug messages appear in a file named **iatelog.log**, *not* in the printer program window.

A typical example: *-Vffff*

-b

Causes the program to hide its window.

Although the window will not be visible, the program can run normally.

If no parameters are used on the command line, then the program will use the configuration file named **pcfg**, and will run in the foreground (with a visible window) without any debugging or log-file messages enabled.

This sample command line specifies a configuration file name of **pcfg.ti**, and background operation (with no window):

```
iate_prt.exe -fpcfg.ti -b
```

Following are instructions on how to find and edit the printer program's command-line options.

Editing Command-Line Options in Windows 95, 98, or NT

Find the installed **InnoSys** folder and open it. Find the **iate_prt** shortcut icon inside the folder. Click the mouse *once* on the shortcut and choose **Properties** from the **File** menu. A properties window should appear. Click the **Shortcut** tab near the top of the properties window, and look for the **Target** text entry field which shows the file path to **iate_prt.exe**. You may add command-line options at the right-hand end of the text in that field. Do not remove any of the existing text in the field— if you do, the shortcut may not be able to start the printer program.

Consider creating a copy of the shortcut item as a 'backup' before making any changes. If you make any accidental changes which cause the shortcut to fail, you can revert to your backup.

Editing Command-Line Options in Windows 3.1, 3.11, or Windows for Workgroups

Find the **iate_prt** icon in the **InnoSys** program group. Click the mouse *once* on the icon, and choose **Properties** from the **File** menu. A properties dialog should appear, including a **Command-Line Options** field which you can edit.

Configuring the Printer Software

Configuration Files

Configuration information for the printer program is kept in text files called “configuration files”. Each configuration file configures a single printer-object connection, including the information necessary to:

- establish a connection to an IATE Gateway printer TA object,
- properly receive print data from the airline host, and
- configure the connection to the printer.
- configure the format of printed output.

Many installations use only one printer object. In that case, a single configuration file is sufficient. However, the software can also use multiple configuration files in order to specify multiple printer objects and printers. The 16-bit version of the printer program can accept only one or two configuration files. The 32-bit printer program can accept an essentially unbounded number of configuration files, limited only by certain system resources.

The `-filename` command-line option specifies the name of a configuration file. If that option is not specified on the command line, then by default the program uses the configuration file named **pcfg**. If multiple configuration files are to be used, each must be specified with a separate `-filename` command-line option.

To edit the configuration file, use a text editor such as Windows **Notepad** or DOS **EDIT**. (It’s also possible, but generally not recommended, to edit the configuration file with a word processor such as **Word**; but in that case you must be sure to save the file as plain “**text**”, not a **Word** document.)

Configuration Directives

The configuration file's contents consist of plain text (sometimes called "ASCII text" or "DOS text", not a formatted file like a Word document). Each non-blank line of text in the file contains a "configuration *directive*" or a *comment*.

A configuration *directive* consists of a *Keyword* and, depending on the keyword, may also require an additional *Parameter*, on the same line, separated from the Keyword by blank space. For example, the `OBJECT_NAME` configuration directive and its parameter would appear on a line like the following:

<u><i>Keyword:</i></u>	<u><i>Parameter:</i></u>
<code>OBJECT_NAME</code>	<code>@host\ialcserver\printer01</code>

A *comment* is any line that begins with the '#' character. Comments are entirely optional; they can be added to explain the configuration or to explain specific directives. They are solely for user reference — the printer program *ignores* any comments and any blank lines in the file.

The printer configuration file format is somewhat similar to the format used in NT and UNIX Gateway configuration files, but not quite the same. Printer configuration files are not broken down into separate titled "sections" like the NT and UNIX Gateway configuration files. Instead, all of the configuration directives in a file may be listed in any order or sequence. (Sample configuration files, shown elsewhere in this document, illustrate typical usage and ordering of configuration directives.)

“Local” and “Remote” Printers

The printer software can print through local or remote printers. A local printer is connected to the PC that runs the printer program. A remote printer is not connected directly to the local PC, but can be reached through the TCP/IP network (on an office’s Ethernet LAN for example).

Local Printers

Local Serial Printers

A local serial printer can be connected to a serial port such as COM1 or COM2. The printer program can print to a local serial printer in either one of two ways: by sending output directly through the COM port to the printer, or by submitting output indirectly through the Windows print management (spooling) facility.

If you wish to print directly to a serial port, the `PORT_NAME` configuration item specifies the COM port (usually COM1 or COM2), and related items specify communication details such as the `BAUD_RATE`. The printer program takes exclusive ownership of the serial port in order to print through it directly; therefore, other Windows or DOS applications should not attempt to use the same serial port and printer at the same time.

If you wish to print through Windows print management, or *spooling*, a `SPOOL...` directive will be required. For example, `SPOOL_ALL` routes all types of prints (host, local, and peer) to the spooled printer. See **More Information about Spooled Printing** below.

Local Parallel Printers

A local parallel printer may be connected to a parallel port such as LPT1. The printer program can print to a parallel printer *only through spooling*. The printer program does not provide a direct output directive for parallel ports. The `PORT_NAME` directive *cannot* specify a parallel port such as LPT1, for example.

See **More Information about Spooled Printing** below.

Remote Printers

A remote printer is one which the printer program can access through a network connection. A remote printer is not connected directly to the computer that is running the printer program. Remote printers generally operate through “redirected” `LPT...` connections from the local PC. From the printer program’s point of view, these look much like local parallel ports; and the same requirements apply: The printer program will use the spooling facilities to print to the remote printer, so a `SPOOL...` directive will be required. See **More Information about Spooled Printing** below.

For instance, a remote parallel printer is a printer connected to a parallel port on a separate PC which is connected to the office network. Another common type of remote printer is the stand-alone “network printer”, such as an office laser printer with its own connection to the network (typically an Ethernet connection). Another possibility is that a remote printer might be serially connected to a UNIX system on the network. In all of those cases, the printer would need to be designated on the local PC as the default Windows printer, and a `SPOOL...` directive would be required.

However, remote serial printers are less common in Windows environments. Some third-party products can enable the printer program’s PC to use remote COM ports on other Windows PCs. These remote serial ports might appear on the local PC as “redirected” COM ports, and in that case they might be specified with the `PORT_NAME` configuration item. This would be considered a special-purpose configuration, since it would require third-party software. Contact InnoSys if further information is needed.

More Information about Spooled Printing

“Spooled” printing means: printing through Windows print management facilities that you can configure in the *Printers* area of the Windows Control Panel. By “spooling” we mean that the printer program submits its output to Windows for printing, and Windows places the output temporarily into a holding area (sometimes called a “spool”) while attempting to print.

With spooled printing, Windows can arbitrate access to the printer on behalf of multiple applications; so it is possible for multiple applications to submit information to be printed on one printer. Windows will keep the applications’ print jobs separate and print them one-at-a-time.

In order to be used with spooling, a printer must be set up in the *Printers* area of the Windows Control Panel, e.g. through the ‘Add Printer’ procedure. Refer to Windows documentation or the online help accessible through the *Printers* control panel.

Normally, the printer program will send spooled print jobs to the Windows Default printer designated in the *Printers* area of the Windows Control Panel. The `SPOOL_PNAME` directive can specify a Windows printer other than the default.

Which Configuration Directives are Required?

Every configuration file should contain certain *required* directives to specify an **Object connection** (which is the connection a Printer TA Object configured at the Gateway), and to specify **Printer connections** (to a directly connected serial printer and/or a local or remote Windows printer). Some additional directives, though generally “optional”, may be needed depending on the airline host and the printer being used.

Required *Object Connection* directives

Object Connection directives must be specified in order to establish the connection to the Gateway and prepare to receive print data from the Host. First, the `OBJECT_NAME` and `USE` directives must be specified with their required parameters.

The `OBJECT_NAME` directive must specify the Gateway and Object names, discussed earlier in the **Gateway Host Name, TCP/IP Service Name, and Printer Object Name** section. These names must be specified in a special syntax. Refer to the description of `OBJECT_NAME` in the **Configuration Directives** section.

A printer designated for screen use only, with `USE SCREEN`, can only be used for screen prints from the IATE terminal emulator. A printer designated for host use only, with `USE HOST`, can only be used for host prints. A printer designated with `USE SHARED` may be used for both host and screen prints (the printer program will arbitrate between host and screen prints).

Note:

It is not necessary to use the printer program for screen prints, because the WinIATE terminal software can send screen prints to a Windows printer. But it is possible to use the printer program for screen prints if desired.

Depending on Gateway configuration particulars, it may be necessary to set the `NO_TA_TIMEOUT`, `NO_HEARTBEAT`, or `AUTO_ANSWER` directive. For details, please refer to each directive’s description in the **Configuration Directives** section.

Required *Printer Connection* directives

The required Printer Connection directives depend on whether *spooled* printing or *direct* serial printing will be used. Refer to the “**Local**” and “**Remote**” printers section for a discussion of spooled vs. direct serial printing.

For spooled printing to the Windows default printer (which may be a local or a remote printer), one of these `SPOOL...` directives should be specified: `SPOOL_ALL`, `SPOOL_HOST`, or `SPOOL_SCREEN`. `SPOOL_ALL` routes *all* printouts for the configured printer object to the spooler, so that *none* of the printouts will be sent to a COM serial port (even if a serial port is configured with `PORT_NAME`). The `SPOOL_HOST` and `SPOOL_SCREEN` directives route only the specified type of printout (host or screen) to the spooler, and allow the other type of printout to go to the serial port (if one is configured with `PORT_NAME`).

For direct printing through a serial port, the `PORT_NAME` item should specify the port such as `COM1`. The related items `BAUD_RATE`, `PARITY`, `STOP_BITS`, and `CHARACTER_SIZE` should also be set, to define the communication parameters for the serial connection. It is also advisable to specify one of `RTS_CTS`, `XON_XOFF`, or `DISABLE_FLOWCONTROL` to select an appropriate flow-control mode. `USE_DSR` or `ASSUME_ONLINE` may also be needed, depending on the connection cabling and the desired treatment of offline conditions. For details please refer to each directive’s description in the **Configuration Directives** section.

Additional configuration directives will probably be required, to suit the specifics of the operating environment. For example, `TICKET` specifies ticket printing; various formatting and handling directives assist in meeting the requirements with particular airlines and printers; `ATB/ATB2` printers have special required directives; and so forth. The individual directives’ descriptions provide some details.

List of Configuration Directives

Following is a list of configuration directives, organized into categories. Each directive is marked as either Required or Optional, with further explanations where appropriate. Although almost all of the directives are “optional” in a general sense, every configuration file will need some of the optional directives in order to suit the airline host type and printer being used.

Object Connection Directives

These directives define the printer program’s connection to a printer TA object. The printer object (or group) must be defined in the IATE Gateway configuration.

<i>Keyword:</i>	<i>Parameter:</i>	<i>This directive is required .</i>
OBJECT_NAME	@host\service\object	

This directive specifies the fully-qualified name of the printer object. A fully-qualified name includes *all* information that the printer program will need to find and connect to this printer object: the Gateway host name, the TCP/IP service name, and the printer object name.

The `host` name specifies the host machine where the ALC Gateway is running. The `object` name must match an Object Definition in the Gateway configuration file for that host. The required `service` name is usually `ialcserver`, but may be different. Refer to the discussion in the **Gateway Host Name, TCP/IP Service Name, and Printer Object Names** section.

For example, a complete `OBJECT_NAME` directive might look like this:

```
OBJECT_NAME @nt_gateway\ialcserver\printer01
```

Note the use of reverse-slash (\) characters in the parameter. Forward-slash (/) characters will not work.

<i>Keyword:</i>	<i>Parameter:</i>	<i>This directive is required .</i>
USE	HOST or SCREEN or SHARED	

This directive specifies the print job type for this printer: Host prints, terminal Screen prints, or both. (`SHARED` specifies that the printer can be used for both host and screen prints.)

Keyword: Parameter: *This directive is optional.*
FINAL_EOMS **EOMC, EOMI, EOMU, and/or EOMP**

FINAL_EOMS specifies one or more types of EOM character(s) which, when received at the end of a message segment from the host, will cause the printer program to consider the message complete. The appropriate configuration will depend on the airline host type and possibly the printing mode (e.g. Ticket vs. Invoice printing, etc.) The default set of “final EOMs” is: **EOMC** and **EOMU**.

Refer to Gateway documentation for information about EOM characters.
EOM denotes “End Of Message”. EOMC is “EOM-Complete”, EOMI is “EOM-Incomplete”, EOMU is “EOM-Unsolicited”, and EOMP is “EOM-PushButton”.

Keyword: (No Parameter) *This directive is optional.*
COLLECT_ALL

This directive affects the printer program’s treatment of messages containing multiple segments. If this directive is specified, the printer program collects all segments of a message before beginning to print the message.

If this directive is *not* specified, the printer program prints each segment immediately upon receipt, without waiting for the remainder of the message to arrive from the host.

Keyword: (No Parameter) *This directive is optional.*
NO_TA_TIMEOUT

If **NO_TA_TIMEOUT** is specified, the printer program tells the Gateway not to time-out the object connection because of inactivity.

If **NO_TA_TIMEOUT** is *not* specified, the Gateway may or may not time-out and disconnect the object due to inactivity, depending on the *Gateway’s TA Timeout* configuration directive.

Keyword: (No Parameter)

This directive is optional.

NO_HEARTBEAT

If `NO_HEARTBEAT` is specified, the printer program will *not* send heartbeats to the Gateway. If `NO_HEARTBEAT` is *not* specified, the printer program *will* send heartbeats to the Gateway at approximately 1-minute intervals.

An NT or UNIX gateway may require these heartbeats, depending on its `HEARTBEATS_REQUIRED` directive.

A Mac gateway does not require heartbeats by default; but if you do not set the `NO_HEARTBEAT` directive, then the printer program begins to send the heartbeats and, as soon as the Mac gateway receives the first heartbeat, it expects to receive them thereafter.

When a gateway detects the loss of 1-minute heartbeat messages from the printer program, then the Gateway may disconnect the session.

Keyword: (No Parameter)

This directive is optional.

ACK_FINAL_AFTER_XFER

This directive instructs the printer program to temporarily withhold its acknowledgment to the host, for the final segment of a print message, until after the program has begun its attempt to print that segment. In the case of a directly-attached serial printer (defined by the `PORT_NAME` directive), the program sends the acknowledgment after sending the final segment through the COM port to the printer. In the case of a local or remote Windows printer (defined by a `SPOOL. . .` directive), the program sends the acknowledgment after sending the final segment to the Windows print spooler.

This directive may be of some help in avoiding overrun conditions while sending a series of long print jobs from the host to a relatively slow printer.

The “Spooling” Directives: *for printing to Windows printers*

The `SPOOL_ALL`, `SPOOL_SCREEN`, and `SPOOL_HOST` directives (listed on the next page) specify which types of printouts (if any) should be sent to a Windows printer through standard Windows printing facilities. (“Windows printers” comprise the printers that are defined in the *Printers* area of the Windows Control Panel).

These directives’ names refer to the term “spooling”, because Windows may place print messages in a holding area, sometimes called a “spool”, while attempting to print them.

A configuration file should specify at least one destination printer. It may be a Windows printer as indicated by one of `SPOOL_ALL`, `SPOOL_HOST`, or `SPOOL_SCREEN`. A configuration file should specify no more than one of these three directives.

Alternatively, the destination printer may be a directly-attached serial printer specified by `PORT_NAME`, or else a disk file specified by `FILE_NAME`. For details, refer to the descriptions of those directives.

Advanced users may choose to specify two printers in one configuration file: one being a Windows printer for either Host or Screen prints (either `SPOOL_HOST` or `SPOOL_SCREEN`), and the other a directly-attached serial printer or a disk file to print the other type of print job (Screen or Host). For example, you could specify `SPOOL_HOST` to route host-prints to a Windows printer, and also specify either `PORT_NAME` or `FILE_NAME` to route terminal screen-prints (i.e., printouts not accounted for by `SPOOL_HOST`) directly to a serial printer or disk file.

The `SPOOL_ALL`, `SPOOL_HOST`, or `SPOOL_SCREEN` directive *overrides* `PORT_NAME` and `FILE_NAME` for *all* prints, *host* prints, or *screen* prints, respectively:

- If the `SPOOL_ALL` directive is specified, then it overrides `PORT_NAME` and `FILE_NAME` unconditionally. The program routes all printouts, for the printer object specified by `OBJECT_NAME`, through Windows print management.
- If `SPOOL_HOST` is specified, then it overrides `PORT_NAME` and `FILE_NAME` for host prints only: The program routes host prints through Windows print management, but sends screen prints to the COM port or file if defined by `PORT_NAME` or `FILE_NAME`.
- If `SPOOL_SCREEN` is specified, then it overrides `PORT_NAME` and `FILE_NAME` for screen prints only: The program routes screen prints through Windows print management, but sends host prints to the COM port or file.

The spooling directives are described further on the next page.

Keyword: Parameter: *This directive is optional.*
SPOOL_PNAME *printer-specification*

*[This directive refers to Windows 3.x printer profile information.
A future revision of the printer program may provide
additional functionality for Windows 95/98/NT.]*

This directive changes the meaning of the SPOOL_ALL, SPOOL_SCREEN, and/or SPOOL_HOST directives so that they print to the specified Windows printer instead of to the default Windows printer. The “*printer specification*” must exactly match one of the lines in the “[devices]” section of the Windows 3.x profile information (“win.ini” file), for example:

```
Generic / Text Only=TTY, LPT1:
```

If the SPOOL_PNAME directive is specified, then either SPOOL_SCREEN, SPOOL_HOST, or SPOOL_ALL must be specified.

Keyword: Parameter: *This directive is optional.*
SPOOL_CMD *command-name*

This directive defines a *print spooling command*. This directive is necessary only if the standard Windows printing facility is not sufficient for your printing requirements. The *command name* should contain the entire command necessary to print (except for the filename to be printed).

If SPOOL_CMD is specified, the printer program ignores the SPOOL_PNAME setting if it is present in the same configuration file.

Serial Connection directives: *for printing directly through a serial port*

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional.</i>
PORT_NAME	<i>port-name</i>	<i>Use it if you wish to print directly to a serial printer.</i>

The `PORT_NAME` directive defines a serial printer connection, with the name of a COM port (`COM1`, `COM2`, etc.) to which a printer is attached. The program prints directly to the specified COM port.

Only one COM port may be specified in each configuration file. For the 16-bit version of the program, the port name can specify any available serial port in the range from `COM1` through `COM9` inclusive. For the 32-bit version, the port name can specify any available COM port defined in the system. The COM port you choose should not in use by any other applications.

(Most PCs have one or two COM ports built in. `COM1` is sometimes a 9-pin male connector on the PC, and `COM2` is sometimes a 9-pin or 25-pin male connector.)

If a `PORT_NAME` is specified, it is also necessary to specify `BAUD`, `STOP_BITS`, `CHARACTER_SIZE`, and `PARITY` according to printer interface requirements.

The `PORT_NAME` and `FILE_NAME` directives should not be used together in the same configuration file. Use one or the other, to specify printing to a COM port (`PORT_NAME`) or to a disk file (`FILE_NAME`), but not both.

A Spooling directive, `SPOOL_ALL`, `SPOOL_HOST`, or `SPOOL_SCREEN`, overrides `FILE_NAME` and `PORT_NAME` for all prints, host prints, or local (screen) prints, respectively. For details, see **The Spooling Directives**.

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional, but recommended if</i>
BAUD	110, 300, 1200, 2400, 4800, 7200, 9600, 19200, or 38400	<i>PORT_NAME is specified.</i>

This directive specifies the baud rate (data transfer rate) in bits-per-second (BPS) for a serial printer connection on the COM port specified by `PORT_NAME`. The data rate specified by this directive must match the rate that the *printer* itself is configured for (typically by switches on the printer, for example).

Check your printer's baud rate setting and configure the `BAUD` directive accordingly. The default is **4800** BPS if the directive is not specified.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Example:

```
BAUD          9600
```

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional, but recommended if</i>
STOP_BITS	1 or 2	<i>PORT_NAME is specified.</i>

This directive specifies the number of stop bits per character for a serial printer connection on the COM port specified by `PORT_NAME`. The default is **1** stop bit per character.

The number of stop bits specified by this directive should match the setting that the *printer* itself is configured for (typically by switches on the printer, for example). Some printers may have a fixed setting that cannot be changed by switches or other means. The default value of **1** is often the correct choice.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Example:

```
STOP_BITS     1
```


Keyword:
CHARACTER_SIZE

Parameter:
5, 6, 7, or 8

*This directive is optional,
but recommended if
PORT_NAME is specified.*

This specifies the number of *data bits per character*, for a serial printer connection on the COM port specified by `PORT_NAME`.

Many printers may be set for either 7 or 8 data bits. Settings of 5 or 6 are uncommon and are not required for most installations. (Note: This directive has *no* relation to a 6-bit ALC host-line character code set.)

Check your printer's setting for the character size, or number of "data bits", and configure the `CHARACTER_SIZE` directive accordingly. If this directive is not specified, the default is 7 data bits per character.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Example:

```
CHARACTER_SIZE      8
```

Keyword:
PARITY

Parameter:
ODD or EVEN or NONE

*This directive is optional,
but recommended if
PORT_NAME is specified.*

This directive specifies the character parity for a serial printer connection on the COM port specified by `PORT_NAME`.

Check your printer's parity setting and configure the `PARITY` directive accordingly. If this directive is not specified, the default is **ODD** parity.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Keyword: (No Parameter) *This directive is optional.*
USE_DSR

If this directive is specified, the printer program monitors the `DSR` (Data Set Ready) signal on the COM port, to determine whether the printer is *online* or *offline*. If this directive is *not* specified, the program instead monitors `DCD` (Data Carrier Detect; also known as `RLSD`, Received Line Signal Detect). The proper choice depends on the printer's output status signal assignment, connector pinout, and cabling to the PC.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Keyword: (No Parameter) *This directive is optional.*
ASSUME_ONLINE

Always assume that the serial printer is on-line. If this option is *not* specified, the printer program checks the `DCD` signal by default (or the `DSR` signal if the `USE_DSR` directive is specified) to find out whether the printer is online or offline.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Currently, this option has no effect for *parallel* printer connections, which the printer program accesses only through the Windows printing facilities (as specified by a `SPOOL...` directive). The Windows printing facilities monitor the printer's online/offline status independent of the printer program.

Keyword:
SECS_DELAY

Parameter:
number-of-seconds

This directive is optional.

This directive specifies a delay time for an online-to-offline printer status change, on a direct serial printer connection (on a COM port defined by the `PORT_NAME` directive).

If this directive is *not* specified, the printer program uses a default delay time of **15** seconds.

To understand the purpose of the delay time, consider how the printer program reacts upon detecting that a printer has gone offline. The printer program suspends any further output to the offline printer. However, the printer program can retain any data received for printing, and not immediately discard it, in case the printer comes back online within a short time period as defined by this parameter. If the printer does come back online quickly, the printer program sends the data to the printer; but if it does not come back online, the printer program discards the data. The `SECS_DELAY` directive specifies the time in seconds before the program discards data.

The delay time also affects data acknowledgments in SABRE protected mode: If the host attempts to send data to an offline printer during the delay time, the printer program retains the data (as stated above), without sending any acknowledgment to the SABRE host during the delay if the printer remains offline. If the delay expires while the printer is still offline, then the printer program sends a negative acknowledgment to the host, indicating Printer-Offline status.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Keyword:
TX_BUSY_TIMEOUT

Parameter:
number-of-seconds

This directive is optional.

This directive defines a delay time for printer-busy status, on a direct serial printer connection (on a COM port defined by the `PORT_NAME` directive).

The default value is **5** seconds if this directive is not specified.

If the printer program detects a printer-busy condition lasting longer than the specified number of seconds, then the printer program stops sending text to that printer.

The printer-busy condition means that, although the printer is online, it is not ready to print more data, possibly because it is still busy printing previous data.

The printer program can detect the busy condition by means of the flow-control mechanism selected by `RTS_CTS` or `XON_XOFF`. For example, with RTS/CTS flow control, the program considers the printer to be “busy” if:

1. The printer program activates the `RTS` (Request-To-Send) signal, indicating intention to send data to the printer; *and*
2. The printer keeps the `CTS` (Clear-To-Send) signal inactive to indicate that the printer is busy, not ready to print more data.

This directive applies *only* to COM port connections, defined with the `PORT_NAME` directive. This directive does not apply to spooled printing or print-to-disk configurations.

Flow Control directives (*for serial printer connections*)

These directives control the printer program's optional use of RTS/CTS flow control (also called "ready/busy" or "hardware" flow control), or XON/XOFF flow control (also called "start/stop" or "software" flow control).

If you wish to use RTS/CTS or XON/XOFF flow control, specify either `RTS_CTS` or `XON_XOFF`, but not both. If neither is specified, the default is to use RTS/CTS flow control, unless `DISABLE_FLOWCONTROL` is specified.

These directives applies *only* to COM port connections, defined with the `PORT_NAME` directive. These directives do not apply to spooled printing or print-to-disk configurations.

Keyword: (No Parameter) *This directive is optional.*
RTS_CTS

If this directive is specified, the printer program uses RTS/CTS flow control (also called "ready/busy" or "hardware" flow control) for the serial printer connection on the COM port specified by `PORT_NAME`.

If you wish to use RTS/CTS or XON/XOFF flow control, specify one of `RTS_CTS` or `XON_XOFF`, but not both. If neither is specified, the default is to use RTS/CTS flow control, unless `DISABLE_FLOWCONTROL` is specified.

Keyword: (No Parameter) *This directive is optional.*
XON_XOFF

If this directive is specified, the printer program uses XON/XOFF flow control (also called "start/stop" or "software" flow control) for the serial printer connection on the COM port specified by `PORT_NAME`.

Keyword: (No Parameter) *This directive is optional.*
DISABLE_FLOWCONTROL

Turns off flow control monitoring, so that neither RTS/CTS nor XON/XOFF flow control will be used. This directive is provided in order to override the default RTS/CTS flow control. To ensure predictable results, do not specify `RTS_CTS` or `XON_XOFF` along with `DISABLE_FLOWCONTROL`.

Print-to-Disk directives

<u>Keyword:</u> FILE_NAME	<u>Parameter:</u> <i>file-name</i>	<i>This directive is required for Print-to-Disk configurations only.</i>
-------------------------------------	---------------------------------------	--

This directive activates print-to-disk functionality, specifying a file for output. If `SEPARATE_MESSAGES` (see below) is *not* specified, the program “prints” (writes) messages into a single file in sequence. If `SEPARATE_MESSAGES` is specified, *file-name* specifies the base file name, to which a unique extension will be added for each separate message file.

The `FILE_NAME` and `PORT_NAME` directives should not be used together in the same configuration file. Use one or the other, to specify printing to disk or to a COM port, but not both.

A Spooling directive — `SPOOL_ALL`, `SPOOL_HOST`, or `SPOOL_SCREEN` — overrides `FILE_NAME` and `PORT_NAME` for all prints, host prints, or screen prints, respectively. For details, see **The Spooling Directives**.

<u>Keyword:</u> SEPARATE_MESSAGES	<u>(No Parameter)</u>	<i>This directive is optional.</i>
---	-----------------------	------------------------------------

For print-to-disk (with the `FILE_NAME` directive), this directive causes each message to be placed in a separate file. When using this directive, specify a `FILE_NAME` without an extension. Each message will have a unique numeric extension.

For example, if `FILE_NAME` specifies the name “message”, and `SEPARATE_MESSAGES` is also specified, then message files will be named `message.1`, `message.2`, and so forth.

Carriage Return / Line Feed (CR/LF) directives

These directives control the printer program's output of Carriage Return (ASCII code 13 decimal, 0D hexadecimal) and Line Feed (ASCII code 10 decimal, 0A hexadecimal) at the end of each printed line. One of these directives may be needed in order to correct printing problems such as these:

- The printer does not advance the paper from one line to the next (possible solution: CR_TO_CRLF or CR_TO_LF)
- The printer double-spaces lines which should be single-spaced (possible solution: CRLF_TO_CR)

At most one of the following directives should be specified. If more than one of them is specified, the resulting output is undefined.

Keyword: *(No Parameter)* *This directive is optional.*
CR_TO_CRLF

“Add Line Feed after Carriage Return”:
If this directive is specified, the printer program adds a Line Feed character after each Carriage Return character received in print messages, before sending the text to the printer.

Keyword: *(No Parameter)* *This directive is optional.*
CRLF_TO_CR

“Remove Line Feed after Carriage Return”:
If this directive is specified, the printer program removes the Line Feed character in each Carriage Return / Line Feed sequence received in print messages, before sending the text to the printer.

Keyword: *(No Parameter)* *This directive is optional.*
CR_TO_LF

“Convert Carriage Return to Line Feed”:
If this directive is specified, the printer program substitutes a Line Feed character in place of each Carriage Return character received in print messages, before sending the text to the printer.

Keyword:
LF_TO_CR

(No Parameter)

This directive is optional.

“Convert Line Feed to Carriage Return”:

If this directive is specified, the printer program substitutes a Carriage Return character in place of each Line Feed character received in print messages, before sending the text to the printer.

Keyword:
LF_TO_CRLF

(No Parameter)

This directive is optional.

“Add Carriage Return before Line Feed”:

If this directive is specified, the printer program adds a Carriage Return character prior to each Line Feed character received in print messages, before sending the text to the printer.

General Output-Formatting Directives

Keyword: (No Parameter) *This directive is optional.*
SPACE_BEFORE_CR

If this directive is specified, the printer program adds a blank Space character prior to each Carriage Return in print messages, before sending the text to the printer. Certain printers may require this setting, but most do not.

Keyword: Parameter: *This directive is optional.*
LEFT_MARGIN *number-of-spaces*

This directive provides a way to adjust the left margin by simply printing a number of blank spaces at the beginning of each line. For example, `LEFT_MARGIN 3` specifies that each line of printed output will begin with 3 blank character spaces.

Keyword: (No Parameter) *This directive is optional.*
DONT_SUPPLY_FF

This directive disables the automatic insertion of Form Feeds. If this directive is *not* specified, the printer program inserts Form Feed (FF) characters as needed in order to begin each printed message at the top of a page.

Keyword: Parameter: *This directive is optional.*
REPLACE_FFS *number-of-linefeeds*

If this directive is specified, the printer program substitutes the specified number of Line Feed characters in place of each Form Feed character received in a message, before sending the text to the printer.

Testing/Diagnostic Directive

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional.</i>
TEST_PRINT	<i>file-name</i>	

Enables the “Printer Test” selection in the **File** Menu. If a *file name* is specified, that file will be printed when “Printer Test” is selected from the menu. Otherwise, a standard test pattern will be printed when “Printer Test” is selected.

Window Control Directive

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional.</i>
RUN_MINIMIZED	<i>password-in-hexadecimal</i>	

This directive causes the printer program to “minimize” (iconify) its window upon starting up. This directive requires one parameter, a password. The *password* should be entered as a series of one or more hexadecimal character codes, representing the ASCII characters of the password. For example, if the password is “EBMES”, this parameter would be entered as: “RUN_MINIMIZED 45 42 4D 45 53”.

When the operator clicks on the minimized icon representing the printer program, the program issues an input prompt for the password. The operator must enter the password in order to open the printer program window.

(If you want the printer program to run without any visible window or icon, use the “-b” option on the command line, as described in the **Command-Line Options** section.)

TAB Expansion Directives *for Apollo host connections*

Keyword: *(No Parameter)* *This directive is optional.*
NO_TAB_EXPANSION

This is a Horizontal Tab handling directive for Apollo host connections.

This directive instructs the printer program to convert the ALC Horizontal-TAB character (value 2C hexadecimal) to ASCII Horizontal-TAB (9) before sending it to the printer.

If this directive is *not* specified, the printer program converts the ALC TAB character to a series of ASCII Space characters sufficient to reach the next tab stop.

Keyword: *Parameter:* *This directive is optional.*
TABS **AIRLINE or AGENCY**

This is a Vertical Tab handling directive for Apollo host connections.

If the AIRLINE setting is specified, the printer program converts the ALC Vertical-TAB character (value 3C hexadecimal) to ASCII Form-Feed (0C hexadecimal / 12 decimal), and selects tab-stops appropriate for Airline printing. If AGENCY is specified, the program converts 3C to Carriage Return, and selects tab-stops appropriate for Agency printing.

The default setting is **AGENCY** if this directive is not specified.

Note: The X3C_TO_ETX directive, if specified, will override the TABS directive.

Keyword: *(No Parameter)* *This directive is optional.*
X3C_TO_ETX

This is a Vertical Tab handling directive for Apollo host connections.

If this directive is specified, the printer program converts the ALC Vertical-TAB character (value 3C hexadecimal) to an ASCII End-of-Text character (ETX, character code 3) before sending it to the printer.

If this directive is *not* specified, the program will convert character 3C to Form Feed or Carriage Return as required, depending on the TABS directive.

Special Directives *for Air New Zealand host connections*

Keyword: (No Parameter) *This directive is optional.*
IGNORE_NZFLUSH

This directive enables special message handling for Air New Zealand host connections.
This directive should not be used with other host types.

This directive instructs the printer program to ignore the printer “flush” message from an Air New Zealand host system.

Keyword: (No Parameter) *This directive is optional.*
INTERCEPT_ROTTY

This directive enables special message handling for Air New Zealand host connections.
This directive should not be used with other host types.

If this directive is specified, the printer program performs special processing for Air New Zealand `ROTTY` messages.

Keyword: (No Parameter) *This directive is optional.*
MESSAGE

This directive enables special message handling for Air New Zealand host connections.
This directive should not be used with other host types.

If this directive is specified, the printer program assumes that the printer is used to print messages only (not tickets).

Keyword: (No Parameter) *This directive is optional.*
TICKET

This directive enables special message handling for Air New Zealand host connections.
This directive should not be used with other host types.

If this directive is specified, the printer program assumes that the printer is used to print tickets only (not regular messages).

Special Directives *for other host types*

Keyword: (No Parameter) *This directive is optional.*
STX_ETX

This directive causes the printer program to send the “Start of Text” character (STX, character code 02) before the first character of each printed message, and the “End of Text” character (ETX, code 03) after the end of each message.

This directive may be required for certain printers, and may be needed on EgyptAir connections.

For ATB and ATB2 printers, use `SUPPLY_STX` and/or `SUPPLY_ETX` instead, if required.

Keyword: (No Parameter) *This directive is optional.*
BLOCK_NUMBERING

Some hosts, such as EgyptAir, may add a *block number* to certain types of printer messages (usually ticket images) to help insure message integrity.

If you have specified the `HASH_TOTAL` or `BLOCK_NUMBERING` directive, and there appear to be some characters missing at the beginning of each printed message block, then you may need to remove one or both of these directives..

Keyword: (No Parameter) *This directive is optional.*
HASH_TOTAL

Some hosts, such as EgyptAir, may use a *hash total* value comprising 2 characters at the beginning of certain types of printer messages (usually ticket images). This is an error-correcting checksum to help insure message integrity.

If you have specified the `HASH_TOTAL` or `BLOCK_NUMBERING` directive, and there appear to be some characters missing at the beginning of each printed message block, then you may need to remove one or both of these directives.

Keyword: (No Parameter)

This directive is optional.

BLANK_COMPRESSION

Some hosts, such as EgyptAir, may use a special *blank compression* scheme in certain types of printer messages to reduce the amount of data that is sent to the printer. This is typically used for ticket printers.

If the columns in a printout are not aligned correctly, and some unexpected characters (within the range from “C” through “Z”) appear in a place where more blank space would be expected, then you may need to specify `BLANK_COMPRESSION`.

If `BLANK_COMPRESSION` is specified, and printouts show a number of extra blanks, or some characters appear to be missing, then you may need to remove this directive.

Keyword: (No Parameter)

This directive is optional.

ISEA-TICKET

This directive enables special message handling for El-AI host connections. This directive should not be used with other host types.

This directive causes the printer to reformat messages according the El-AI specifications.

Keyword: (No Parameter)

This directive is optional.

CPARS_FORCE

This directive is only used with the CPARS host type. This directive instructs the printer program to interpret received data as CPARS data — even if the CPARS host type is not selected in the IATE Gateway configuration.

Keyword: Parameter:

This directive is optional.

DEVICE_TYPE

`DEV_TTY` *or*
`DEV_CENTRONICS` *or*
`DEV_TERMINET`

This directive is only used with the CPARS host type. This directive instructs the printer program to perform character translations appropriately for the specified CPARS printer type.

Message Notation directives

These directives specify special notations or marks to be printed along with each message sent to the printer(s) defined in the configuration file.

Keyword: (No Parameter) *This directive is optional.*
TIMESTAMP

This directive causes the printer program to output a header line, containing an 8-digit *message-number* and the current *date and time*, above each message printed.

The header line's format is shown in the following example. This example shows message number 152 printed on Monday, January 1st, 1999 at 12:30 PM. The time appears in a 24-hour format, as `hour:minute:second`, from 00:00:00 to 23:59:59.

```
message:00000152 at Mon Jan 01 12:30:00 1999
```

Keyword: Parameter: *This directive is optional.*
MESSAGE_MARK *value*

This directive specifies a 2-digit hexadecimal value (*value*) which defines the ASCII code for a character to be placed at the end of each message. For example, to terminate each message with the exclamation-mark character '!', *value* would be set to 21: the hexadecimal representation of the ASCII code for the character '!'.

Special Print-Control Directives: *to set orientation, font, etc.*

With some printers, the directives described in this section can control printout characteristics such as the *orientation* (Portrait or Landscape), the *font* in which characters are printed, and possibly other parameters.

The **SETUP_STRING** directive provides access to the physical printer's control commands. With this directive, you specify *command codes* that the printer program sends to the printer. Some (not all) printers provide a rich set of commands to control various printout characteristics, which may include the orientation and font (as well as other parameters such as margins and print-quality options). Such commands, if available, are documented in the printer's user manual and cannot be described here.

The other three directives described in this section can be used *instead of* **SETUP_STRING**, but only to control the orientation and font. The **ORIENTATION** directive selects either Portrait or Landscape orientation; and the **FONT_NAME** and **FONT_SIZE** directives select a font and its size. These directives operate through the Windows print-control facilities and printer-driver software, to control the printer indirectly. This is somewhat similar to selecting a font and orientation in a word processor or text editor.

If you do *not* use any of these printer program directives to select an orientation or font, then your printouts may appear in a default or previously selected font. This may be acceptable in some situations; especially if you are using a printer that does not provide multiple fonts or control of orientation, or if you are satisfied with the results you get from the printer's default settings. However, if you are using an advanced printer, such as an inkjet or laser, you may have reason to experiment with the options available through these directives.

In some networked printing environments, these directives may be useful to ensure a consistent orientation and font, when airline printouts are interspersed with printouts from other applications that use different settings.

Before you decide to use the `SETUP_STRING` directive or the `FONT_NAME`, `FONT_SIZE`, or `ORIENTATION` directive, be sure to consider the following limitations:

- *These directives can be used with the 32-bit printer program only. The 16-bit printer program does not support these directives.*
- Generally, if you use the `SETUP_STRING` directive in a configuration file, then you cannot use any of the other three directives discussed in this section: `ORIENTATION`, `FONT_NAME`, or `FONT_SIZE`.
- If you are using a serial printer on a COM port selected by `PORT_NAME`, then you can use the `SETUP_STRING` directive, but you cannot use `ORIENTATION`, `FONT_NAME`, or `FONT_SIZE` with that printer.
- If you use a `SPOOL...` directive to send printouts to a Windows printer, and you use the `SETUP_STRING` directive to send commands to that printer, then you'll also need to specify `SPOOL_BINARY`.
- If you are using the `ORIENTATION`, `FONT_NAME`, and/or `FONT_SIZE` directives, then *do not use* `SPOOL_BINARY`.
- `ORIENTATION`, `FONT_NAME`, and `FONT_SIZE` do not work with the "Generic / Text Only" printer driver.

For details on these directives, refer to the descriptions on the following pages.

Keyword: Parameter: *This directive is optional.*
SETUP_STRING *sequence of hex character codes*

*This directive can be used with the 32-bit printer program only.
The 16-bit printer program does not support this directive.*

This directive allows the user to define a *setup string*, which the printer program will send to the printer at the beginning of every message. This can be used to re-initialize the printer, set printer-specific options, etc. This typically involves printer-specific command sequences that often begin with the ASCII “Escape” control character (code 1B hexadecimal).

The parameter values for this directive are a series of 2-digit hexadecimal numbers, separated by spaces. These values represent character codes. There may be at most 30 characters in the string.

For example, the string 1B 71 is an escape sequence that causes certain printers to print in condensed mode. If this sequence happened to be appropriate for the type of printer you are using, you could specify it this way:

```
SETUP_STRING     1B 71
```

Check your printer’s user manual before specifying and using any setup string. The user manual may describe the commands that the printer can accept in setup-strings. Such commands are sometimes called Escape Codes or Escape Sequences, because they often involve sending the Escape character followed by some command characters.

Important Notes:

- If you use a `SPOOL...` directive to send printouts to a Windows printer, and you wish to use `SETUP_STRING` to send commands to that printer through the spooler, then you’ll probably need to specify `SPOOL_BINARY` as well. Setup-strings may specify arbitrary character codes, and `SPOOL_BINARY` permits the full range of 8-bit character codes to pass through the spooler to the printer.
- Many printers support a rich set of commands which may be specified through setup-strings. It is up to the user to determine the suitability of this directive in a particular configuration, and to decide whether it is worthwhile to review the printer documentation to determine the necessary command codes.

(continued on next page)

- One possible reason to use a setup-string would be to specify the orientation of a print-out (portrait or landscape, i.e. printing each line across the paper left-to-right, vs. lengthwise from top to bottom). Another possible purpose would be to specify a font and a font-size.

If you are using a `SPOOL...` directive to print to a Windows printer, with a Windows printer-driver other than “Generic / Text Only”, then you may be able to use the `ORIENTATION`, `FONT_NAME`, and `FONT_SIZE` directives (instead of using `SETUP_STRING`) to control the orientation and font.

<u>Keyword:</u>	<u>Parameter:</u>	<i>This directive is optional.</i>
ORIENTATION	PORTRAIT or LANDSCAPE	

*This directive can be used with the 32-bit printer program only.
The 16-bit printer program does not support this directive.*

This directive specifies the printout orientation: either *Portrait* (printing each line across the paper left-to-right), or *Landscape* (printing lengthwise from top-to-bottom).

This directive applies only to printouts routed to a Windows printer by using a `SPOOL...` directive. This directive does not work if `SPOOL_BINARY` is specified. This directive does not work with the “Generic / Text Only” Windows printer driver.

Keyword:
FONT_NAME

Parameter:
font-name

This directive is optional.

*This directive can be used with the 32-bit printer program only.
The 16-bit printer program does not support this directive.*

This directive specifies a Windows font for printing.

If this directive is *not* specified, the printer program does not attempt to select a particular font for printing. In that case, or if the directive specifies a font that Windows or the printer driver cannot provide, then the printout may use a default or previously-selected font instead.

This directive applies only to printouts routed to a Windows printer by using a `SPOOL...` directive. This directive does not work if `SPOOL_BINARY` is specified. This directive does not work with the “Generic / Text Only” Windows printer driver.

The *font-name* parameter should specify the name of a font that Windows and the currently selected printer driver can support. Note that the font name may contain spaces.

Currently, the printer program cannot display a list of available fonts. To see a list of fonts that are available with the current Windows default printer, you can run **WordPad** (in the Windows **Programs / Accessories** menu) and view the available font names that appear in the list-box beneath the toolbar near the upper left corner of the WordPad window. (Click the list-box to open it and view the complete list.)

To illustrate the use of `FONT_NAME`, here are three separate examples.

```
FONT_NAME    Courier
FONT_NAME    Courier New
FONT_NAME    Lucida Console
```

You can only use *one* `FONT_NAME` directive in each configuration file.

Fixed-width fonts are generally more suitable for airline printing than variable-width fonts. Typically, only a very few fixed-width fonts may be available.

Some printers and drivers support *TrueType* scalable fonts, which can be identified by a ‘T’ symbol beside a font’s name in the WordPad font list. (Among the examples above, you may have noticed both “Courier” and “Courier New”. “Courier New” is a TrueType version of Courier.) Some printers and drivers support a mix of several TrueType fonts and a few non-TrueType fonts.

The most basic printers and drivers, such as the “Generic / Text Only” driver commonly used with dot-matrix utility printers, do not support multiple font selections through the Windows printing facilities; so the `FONT_NAME` directive cannot work with them. In such situations, it *may* be possible to control the printed character set by using `SETUP_STRING` instead.

Keyword:
FONT_SIZE

Parameter:
size (in Points)

This directive is optional.

*This directive can be used with the 32-bit printer program only.
The 16-bit printer program does not support this directive.*

This directive specifies the font-size, in *points*. This directive applies only to printouts routed to a Windows printer by using a `SPOOL...` directive. The default is **12** points if this directive is not specified.

This directive applies only to printouts routed to a Windows printer by using a `SPOOL...` directive. This directive does not work if `SPOOL_BINARY` is specified. This directive does not work with the “Generic / Text Only” Windows printer driver.

The most basic printers and drivers, such as the “Generic / Text Only” driver commonly used with dot-matrix utility printers, do not support font size control through the Windows printing facilities; so the `FONT_SIZE` directive cannot work with them. In such situations, it *may* be possible to control the printed character size by using `SETUP_STRING` instead.

Special Directives for use with ATB & ATB2 Printers

The directives described in this section are intended for use with ATB/ATB2 ticket printers. Generally, these directives should not be used with other types of printers.

The printer program supports ATB/ATB2 printing *only* on directly-connected serial printers (as defined by `PORT_NAME` and related directives; see the example below). The printer program does *not* support ATB/ATB2 printing on parallel printer connections, nor any other printers operated through Windows print management (as defined by a `SPOOL...` directive).

The 32-bit printer program supports ATB/ATB2 printing on SABRE, SwissAir, Galileo, and KAL host connections. The 16-bit program currently supports ATB/ATB2 printing for SABRE and KAL, but not SwissAir or Galileo host connections.

Note that the `PRINTER_TYPE` directive is required for all ATB/ATB2 printer connections; but the other directives in this section are applicable only if the `PRINTER_TYPE` parameter is set to `GENERIC_ATB2`. (See the discussion of `PRINTER_TYPE` etc. on the following pages.)

Following is a sample configuration file showing typical settings for a SABRE ATB2 printer.

Sample Configuration for a SABRE ATB2 printer:

```
OBJECT_NAME      @gateway\ialcserver\printer01
AUTO_ANSWER      OFF
PRINTER_TYPE     SABRE_ATB2
PORT_NAME        COM1
BAUD             4800
PARITY           NONE
CHARACTER_SIZE   8
STOP_BITS        1
ASSUME_ONLINE
DISABLE_FLOWCONTROL
```

The `BAUD_RATE`, `PARITY`, `STOP_BITS`, and `CHARACTER_SIZE` may differ for other SABRE ATB2 printer configurations. For example, some may use 2400 baud, and some may be set for Even parity and 7 data bits. Check your host configuration.

For SwissAir or Galileo ATB/ATB2 printers, use `PRINTER_TYPE SWISSAIR_ATB2` or `PRINTER_TYPE GALILEO_ATB2`. Again, the serial communication parameters must be set appropriately; for example, a typical printer may default to 9600 baud, 8 data bits, no parity. Check the printer setup or documentation.

For other types of ATB/ATB2 printer connections such as KAL, use `PRINTER_TYPE GENERIC_ATB2` and other necessary directives listed below.

Keyword:
PRINTER_TYPE

Parameter:
SABRE_ATB2 *or*
SWISSAIR_ATB2 *or*
GALILEO_ATB2 *or*
GENERIC_ATB2

*This directive is required for
ATB2 printer connections only.*

This directive specifies that the printer defined in the current configuration file is an ATB/ATB2 printer, and specifically, that it is compatible with either SABRE ATB2 protocol, SwissAir/Galileo ATB2 link protocol, or other ATB/ATB2 protocols such as KAL.

- The `SABRE_ATB2` setting should be used for SABRE ATB/ATB2 printers.
- The `SWISSAIR_ATB2` and `GALILEO_ATB2` settings *are synonymous*; one or the other should be used for SwissAir or Galileo ATB/ATB2 printers.
- The `GENERIC_ATB2` parameter covers other host types.
The program currently supports KAL protocol in this category.

The rest of the directives discussed in the remainder of this section are intended for use with the `GENERIC_ATB2` printer type.

When `GENERIC_ATB2` is specified, certain ATB/ATB2 printing options take default values, unless set to other values by other directives as described in the remainder of this section. Some of these directives may be required in order to suit a particular printer, its current configuration, and the airline host's configuration on the printer TA. Also notice that some of these directives affect messages sent from the printer to the host, as well as messages sent from the host to the printer.

Keyword:
ATB_SUGGESTION

Parameter:
SHARES *or*
KOREAN_MODE0 *or*
KOREAN_MODE1

This directive is optional.

This directive is applicable only if the `PRINTER_TYPE` directive specifies `GENERIC_ATB2`. This directive is not for use with other ATB/ATB2 printer types or non-ATB printers.

This directive changes several ATB-related parameters at once, to suit a specific airline host type.

Note: This directive cannot be used to specify host types other than those listed here. In particular, do not specify the SABRE host type with this directive. For SABRE printers, you can instead use: `PRINTER_TYPE SABRE_ATB2`

Following are the specific parameters that the `ATB_SUGGESTION` directive sets for `SHARES`, `KOREAN_MODE0`, and `KOREAN_MODE1`.

ATB_SUGGESTION SHARES
sets three parameters for Shares host connections, equivalent to the following directives:

```
REPLACE_C1C2_WITH_STX
HEADER_LENGTH      16
REATTACH_HEADER    1
```

ATB_SUGGESTION KOREAN_MODE0
sets several ATB printing parameters for KAL connections, equivalent to the following directives:

```
HEADER_LENGTH      4
REATTACH_HEADER    0
REPLACE_C1C2_WITH_STX
STX                0a
ETX                0c
```

ATB_SUGGESTION KOREAN_MODE1
sets one ATB printing parameter for KAL host connections, equivalent to the following directive:

```
REPLACE_C1C2_WITH_STX
```


Keyword: (No Parameter)
DISABLE_ACKS

This directive is optional.

This directive instructs the IATE Gateway *not* to acknowledge message segments on behalf of the printer program. (This directive applies specifically to the printer TA object referenced in the configuration file where this directive is used.)

Keyword: Parameter:
HEADER_LENGTH *length*

This directive is optional.

This directive specifies the length (in characters) of a message header that the printer program should *remove* from the beginning of each print message received from the airline host via the Gateway, before sending the message to the ATB/ATB2 printer.

Depending on the `REATTACH_HEADER` directive (see below), the printer program may save a copy of the header characters received from the host; and also *add* those characters at the beginning of any response message received from the ATB/ATB2 printer, before sending the response message to the host via the Gateway.

If this directive is *not* specified, the printer program will *not* remove and add header characters in the manner described above. (However, notice that some other directives described in this section can affect certain message headers and trailers in other ways.)

Keyword: Parameter:
REATTACH_HEADER 0 or 1

This directive is optional.

If the `HEADER_LENGTH` directive (see above) has *not* been specified, then the `REATTACH_HEADER` directive does not apply, and has no effect.

If the `HEADER_LENGTH` directive has been specified, and `REATTACH_HEADER` is specified with parameter value 0, then the printer program will *not* add header characters to messages sent from the ATB2 printer to the airline host.

If the `HEADER_LENGTH` directive has been specified, and `REATTACH_HEADER` is specified with parameter value 1, then the printer program *will* add header characters to messages sent from the ATB2 printer to the airline host.

If the `HEADER_LENGTH` directive has been specified, but `REATTACH_HEADER` is not specified, then the printer program *will* add header characters to messages sent from the ATB2 printer to the airline host.

Keyword: Parameter: *This directive is optional.*
STX *value-in-hexadecimal*

This directive specifies a Start-of-Text (STX) character code for ATB/ATB2 printing.

If this directive is *not* specified, the default value is 02, which is the ASCII standard STX character code.

Keyword: Parameter: *This directive is optional.*
ETX *value-in-hexadecimal*

This directive specifies an End-of-Text (ETX) character code for ATB/ATB2 printing.

If this directive is *not* specified, the default value is 03, which is the ASCII standard ETX character code.

Keyword: Parameter: *This directive is optional.*
SUPPLY_STX *number-of-characters*

This directive specifies the number of STX characters that the printer program should *add* at the beginning of each message received from the airline host via the Gateway, before sending the message to the ATB/ATB2 printer.

Also, the printer program will *remove* the same number of STX characters from response messages sent from the ATB2 printer to the host.

(Note that the STX character code is normally 02, but can be redefined by the STX directive described above.)

Keyword: (No Parameter) *This directive is optional.*
SUPPLY_ETX

This directive instructs the printer program to *add* a single ETX character at the beginning of each message received from the airline host via the Gateway, before sending the message to the ATB2 printer.

Also, the printer program will *remove* an ETX character from response messages sent from the ATB2 printer to the host.

(Note that the ETX character code is normally 02, but can be redefined by the ETX directive described above.)

Keyword: (No Parameter) *This directive is optional.*

REPLACE_C1C2_WITH_STX

If this directive is specified, the printer program will replace the C1 and C2 characters (a pair of airline-specific header characters) with the `STX` character, in each message received from the airline host via the Gateway, before sending the message to the ATB2 printer.

(Note that the `STX` character code is normally `02`, but can be redefined by the `STX` directive described above.)

Keyword: *(No Parameter)* *This directive is optional.*
SUPPLY_ATB_END

This directive is intended for use with certain Apollo host connections.

If this directive is specified, the printer program *adds* a message-ending character to the end of each message received from the airline host via the Gateway, before sending the message to the ATB2 printer. The addition is made *after* the ATB2 checksum (LRC and/or DRC) characters. The printer program also *removes* the ending character in messages sent from the printer to the airline host.

Keyword: *Parameter:* *This directive is optional.*
ATB_END *value-in-hexadecimal*

This directive is intended for use with certain Apollo host connections.
This directive applies only if `SUPPLY_ATB_END` has also been specified.

This directive specifies the value of an ATB message-end character, in hexadecimal.
If this directive is *not* specified, the default ATB “end” character value is `06`.

Keyword:
BLOCK_CONTROL

Parameter:
NONE, LRC, DRC, *or* DRC_LRC

This directive is optional.

This directive controls the printer program's treatment of ATB/ATB2 Block Check characters.

This directive specifies which Block Check characters the printer program should process: none, the LRC only, the DRC only, or both DRC and LRC.

In the latter three cases, the printer program *calculates and adds* the specified Block Check characters to each message received from the airline host via the Gateway, before sending the message to the ATB/ATB2 printer. The printer program *removes* the specified Block Check characters in messages sent from the printer to the airline host.

If this directive is *not* specified, the default is NONE: the printer program will not process block-check characters.

Notes on LRC and DRC calculation:

- The **LRC** calculation method is as follows:
The LRC value is initially zero. Each data character received in a message updates the LRC by a logical XOR with the character value. This method leads to the final LRC value, after processing all of the data characters in the message.
- The **DRC** calculation method is as follows:
The DRC value is initially zero. Each data character received in a message updates the DRC with a one-bit right-rotation, followed by a logical XOR with the character value. This method leads to the final DRC value, after processing all of the data characters in the message. Note that the DRC calculation may *include* the LRC value, depending on the INCLUDE_LRC directive.

<u>Keyword:</u> BLOCK_CONTROL_RANGE	<u>Parameter:</u> INCLUDE_STX, INCLUDE_ETX, INCLUDE_STX_ETX, INCLUDE_LRC, <i>and/or</i> DATA_ONLY	<i>This directive is optional.</i>
---	--	------------------------------------

This directive applies only if the `BLOCK_CONTROL` directive has been specified with a parameter value other than `NONE`.

This directive specifies what portion of the message to include in the ATB/ATB2 LRC and/or DRC checksum calculations. The checksum calculations *always* include the data characters in the message, but may or may not include the `STX` and `ETX` characters. Also, the DRC checksum calculation (if applicable) may or may not include the LRC checksum byte.

The calculation may include the `STX` character, the `ETX` character, or both; according to `INCLUDE_STX`, `INCLUDE_ETX`, or `INCLUDE_STX_ETX`.

The `INCLUDE_LRC` parameter applies only if the `BLOCK_CONTROL` directive specifies `LRC_DRC` checksum calculation. `INCLUDE_LRC` specifies that the DRC calculation will include the LRC checksum value. If `INCLUDE_LRC` is *not* specified, the DRC calculation will *not* include the LRC value.


If the `BLOCK_CONTROL_RANGE` directive is *not* specified, the default setting is `DATA_ONLY`: to include *only* the data characters in the checksum calculations; not the `STX`, `ETX`, or `LRC`.

<u>Keyword:</u> STRIP_DLE_FROM_BC	<u>(No Parameter)</u>	<i>This directive is optional.</i>
---	-----------------------	------------------------------------

This directive instructs the printer program *not* to include `DLE` characters (ASCII code 10 hexadecimal, 17 decimal) in the LRC/DRC checksum calculations. This is relevant only if `DLE` characters might appear in the data stream.

The Edit Menu

 
The **Edit** pull-down menu contains the following command:

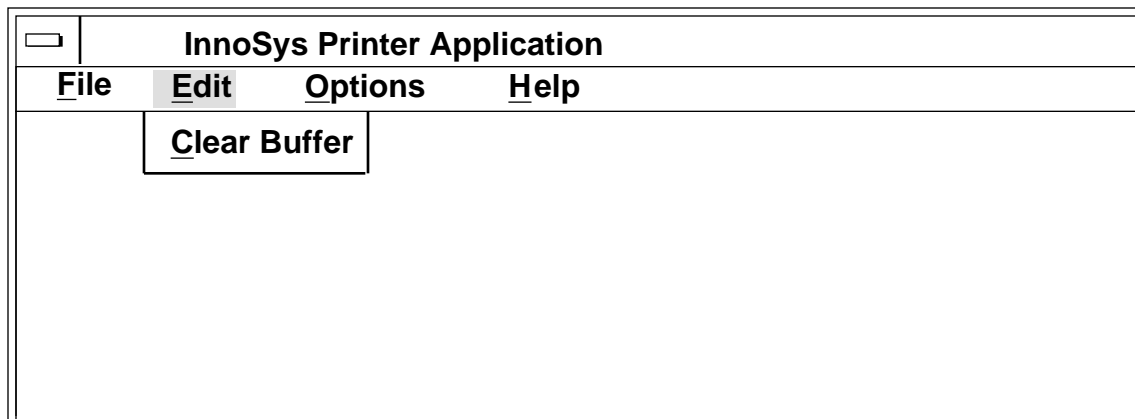

Clear Buffer Erases any diagnostic messages that may be visible in the application window.


The Options Menu

 The **Options** pull-down menu contains the following commands:

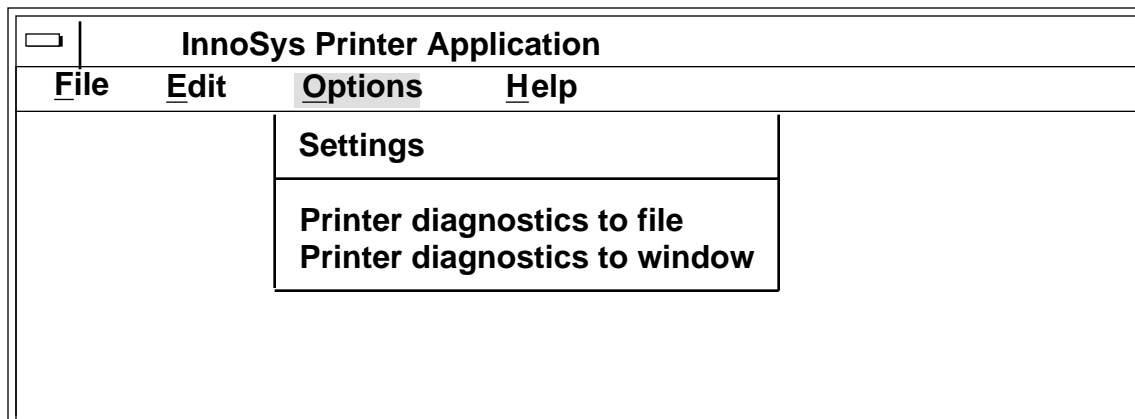

Settings

 Allows the user to configure which diagnostic information is sent to a file or to the screen. The configurable diagnostics are selected from the dialog box shown below.:

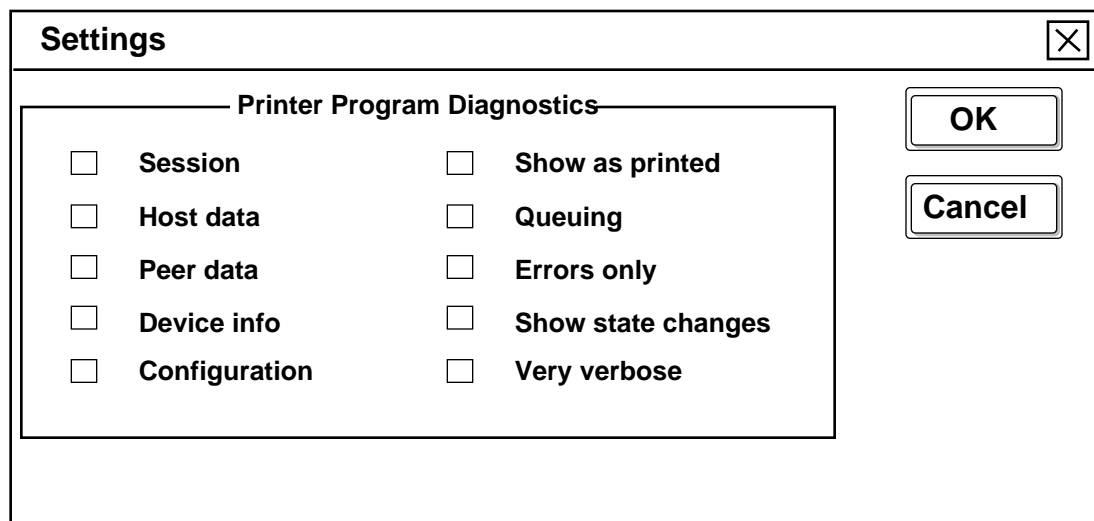

Continued on next page

Options Menu, continued

 
Printer diagnostics to file Routes the diagnostics selected by the user in the “Settings” command above to a file.

Printer diagnostics to window Routes the diagnostics selected by the user in the “Settings” command above to the application window on the screen.


If either diagnostic option is selected, this will be indicated by a check mark (“ ”) to the left of the option in the menu.

The Help Menu

The **Help** pull-down menu provides version information about the printer software. (Currently this menu does not provide any additional help information.)

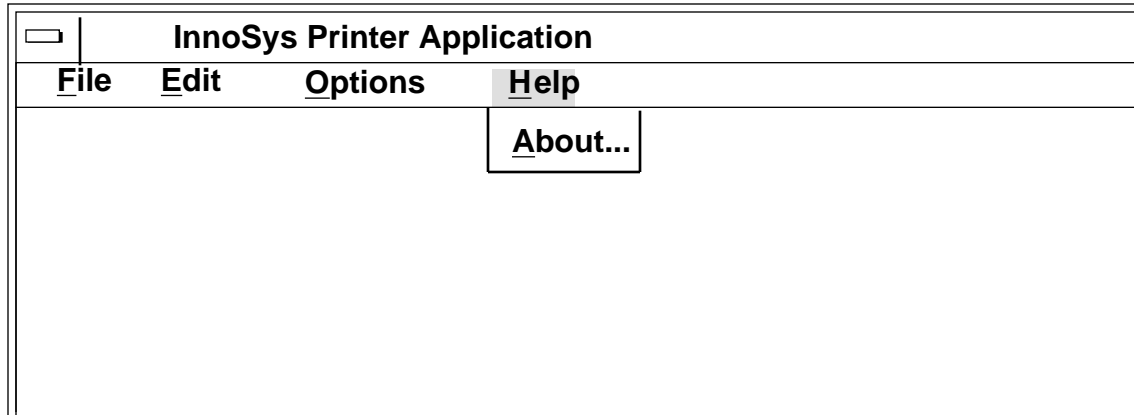


 The **About** command displays the version number of the Printer Software. (This example shows an older version number. The current version number will be higher.)

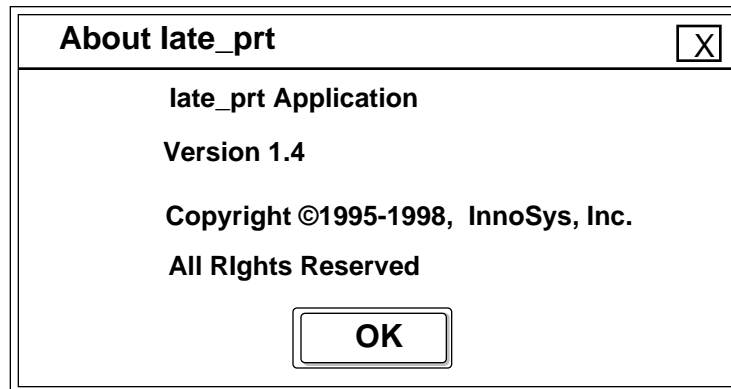


Appendix A — Printer Cabling

 Workstation-to-Printer Cable Wiring Diagram (DB25)

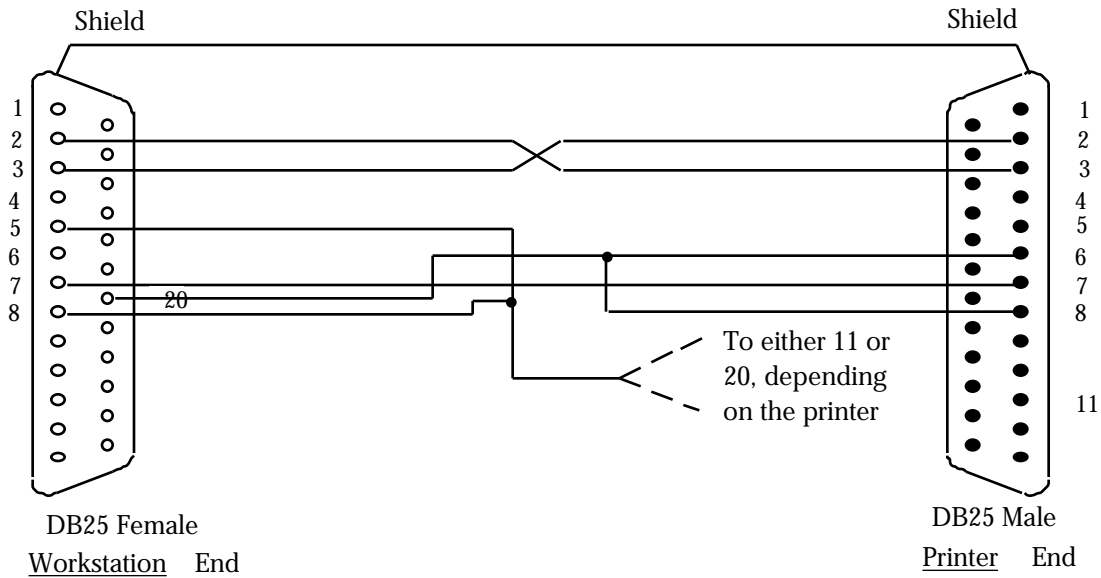

 Workstation-to-Printer Cable Wiring Diagram (DB9)

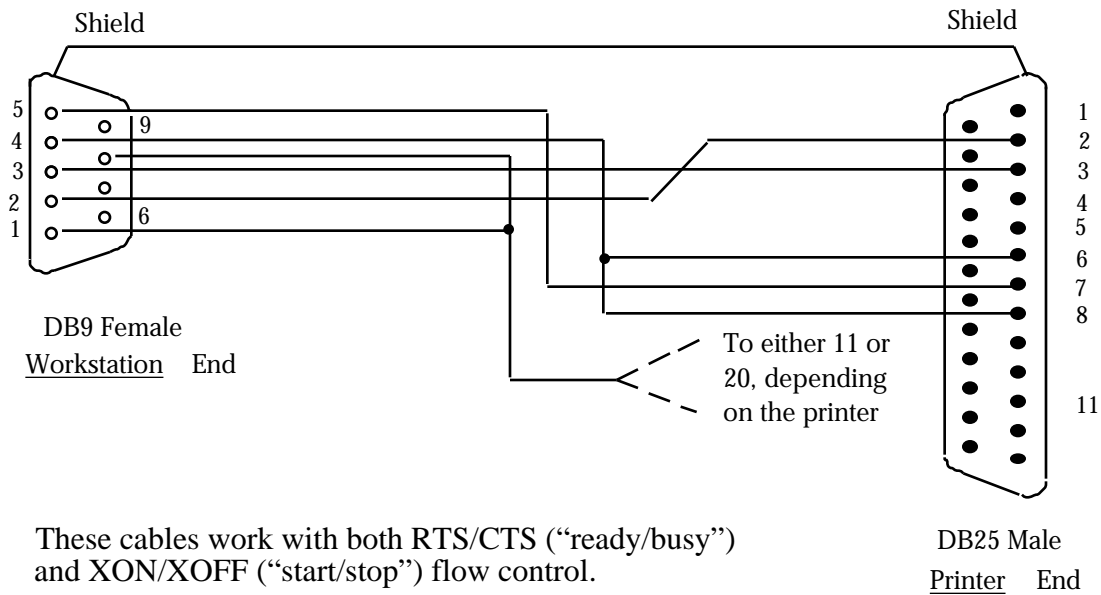

These cables work with both RTS/CTS (“ready/busy”) and XON/XOFF (“start/stop”) flow control.

Appendix B — Sample Printer Configuration files

A typical configuration file for printing to a serial printer such as the TI 810:

```
#
#   Sample configuration for a TI 810,
#   4800 baud, Even parity, 7 data bits, 1 stop bit
#

OBJECT_NAME          @westgw\ialcserver\printer12

PORT_NAME            com1
BAUD                  4800
PARITY                EVEN
CHARACTER_SIZE        7
STOP_BITS             1

RTS_CTS

CR_TO_CRLF

REPLACE_FFS          1
```

A typical configuration file for printing to the default Windows printer:

```
#
#   Sample configuration for printing to the
#   default Windows printer
#

OBJECT_NAME          @ntgw\ialcserver\print0c

SPOOL_ALL
USE                  SHARED
```

A typical configuration file for printing to a specified Windows printer (possibly not the default printer):

```
#
#   Sample configuration for printing to a
#   specified Windows printer
#

OBJECT_NAME      @ntgw\ialcserver\print0c

SPOOL_ALL
SPOOL_PNAME      Generic / Text Only=TTY,LPT1:
```

Note: The example above uses the SPOOL_PNAME command, which refers to Windows 3.x printer profile information. A future revision of the printer program may provide additional functionality for Windows 95/98/NT.

A typical configuration file for printing to a disk file:

```
#
#   Sample configuration for printing to a disk file
#

OBJECT_NAME      @innogw\ialcserver\itin02

FILE_NAME        itin02.txt
COLLECT_ALL
```

A typical configuration file for printing to a SABRE ATB2 printer:

```
#
#   Sample configuration for a SABRE ATB2 printer
#

OBJECT_NAME  @aagw\ialcserver\tkt02
AUTO_ANSWER  OFF

PRINTER_TYPE      SABRE_ATB2

PORT_NAME        COM1
BAUD             4800
PARITY           NONE
CHARACTER_SIZE   8
STOP_BITS        1

DISABLE_FLOWCONTROL
ASSUME_ONLINE
```

The `BAUD_RATE`, `PARITY`, `STOP_BITS`, and `CHARACTER_SIZE` may differ for other SABRE ATB2 printer configurations. For example, some may use 2400 baud, and some may be set for Even parity and 7 data bits. Check your host configuration.

Appendix C — Printer Program Troubleshooting

Following are some of the possible reasons for difficulty in obtaining the expected printed output from the printer program.

Printer Software Does Not Run

A possible reason why the printer program will not run:

The `OBJECT_NAME` directive and its required parameter may be entered incorrectly. This would prevent the printer program from contacting the IATE Gateway and communicating with the airline host.

- Check the Gateway Host Name, Service Name, and Printer TA Object Name components of the `OBJECT_NAME` directive's required parameter. Review the **IATE Gateway Host Name, Service Name, and Printer Object Name** subsection earlier in this manual.
- Verify that the specified object name matches one configured as a printer object in the IATE Gateway configuration.
- There should be no, space, tab, carriage-return or other control-characters within the Gateway Host Name, Service Name, or Printer TA Object Name.

Appendix G of the Terminal manual provides a comprehensive problem solving procedure for resolving gateway connectivity problems.

Printer Software Will Run, But Printer Does Not Print

Possible reasons why a printer being controlled by the IATE printer program will not print:

- 1) Improper configuration, either in the printer program configuration file, the *Printers* area of the Windows Control Panel, or the printer itself (e.g. switch settings).

Review the descriptions of the options you're using, in the **Configuration Directives** section. Also look for any required directives that may be missing from your configuration.

For a directly-connected serial printer, check the required `PORT_NAME`, `BAUD_RATE`, `PARITY`, `CHARACTER_SIZE`, and `STOP_BITS` settings. Check also the flow-control mode: `RTS_CTS` ("hardware" or "ready/busy" flow-control) or `XON_XOFF` ("software" or "start/stop" flow-control); and make sure the selected flow-control mode matches the printer's configuration. Also check cabling as described in item (2) below. Check any switch settings, etc., on the printer if you suspect that the printer itself may be set up incorrectly. Refer to the printer's user manual.

For a Windows printer operated through Windows print management, check the required `SPOOL...` directive. Also check the various Windows setup options for the designated printer, in the *Printers* area of the Windows Control Panel. Try printing to this printer using other Windows applications, to find out whether or not the problem is specific to the printer program. Check any switch settings, etc., on the printer if you suspect that the printer itself may be set up incorrectly. Refer to the printer's user manual.

Try the **Printer Test** function in the File menu. If it does not print at all, the printer program may not be able to contact the printer. Check the `PORT_NAME` directive for a directly-connected serial printer, or the printer designation and port assignments in the Windows *Printers* Control Panel. If the Printer Test function does print, but prints illegibly or improperly, this may indicate problems with the other directives for a serial printer, or other options in the *Printers* Control panel, or the setup of the printer itself (e.g. switch settings).

2) Improper cable, or cable not connected, or printer set offline.

Check the cable connections, the printer's on/offline status (possibly a switch on the printer). Try turning the printer off and on.

For a directly-connected serial printer, you can check for evidence of a cabling problem as follows. Enable printer program diagnostics with a `-v...` command-line option: for example: `"iate_prt -fpcfg -v7f"`. (See the **Command-Line Options** section.) Start the printer program and check for diagnostics in the printer program display window. Look for a message like this: "Device Status changed to 3:pONLINE". If you see the status displayed as "pOFFLINE", then this may indicate a cabling problem. Check the cable connections, and the cable pinout. If you have serial port test equipment, verify that the printer issues an Online signal which passes through the cable on the DCD signal line (or DSR if you are using the USE_DSR configuration directive). If you are using RTS_CTS (a.k.a. "hardware" or "ready/busy") flow-control, verify that the cable passes the required RTS signal from the PC to the printer, and the CTS signal from the printer to the PC. (Cable checks may require assistance from network personnel and suitable test equipment.)

For a Windows printer accessed through a `SPOOL...` directive, check the printer status in the *Printers* area of the Windows Control Panel. Double-click the printer's icon there to open a window that shows the status of print jobs for that printer. Attempt to print through the printer program, or from other applications, and check to see if the printouts appear listed (even if only momentarily) in that printer status window while Windows attempts to print them. Again check the cabling and the printer's online status, particularly if any Windows printer-status warning messages appear on the screen. Verify that the printer is designated as the "default" Windows printer.

3) The printer may be in use, or may have been left inaccessible, by some other application.

Make sure that the Windows printer, or the COM port in the case of a serial printer, is not being used by any other Windows or DOS application. If you suspect that the port may be in use by some other application that you were using earlier, make sure that you've stopped that application. If an earlier application that was using the printer may have crashed or terminated incorrectly and left the printer in an unusable state, try restarting the PC and/or turning the printer off and on.

- 4) The Airline Host or the IATE Gateway is not sending data to the printer program.

You can check for evidence of this problem as follows.

Enable printer program diagnostics with a `-v. . .` command-line option:

for example: `“iate_prt -fpcfg -v7f”`. (See the **Command-Line Options** section.)

Attempt to print, and watch for diagnostic messages in the printer program’s window, showing printing activity. If none appear (the window does not show activity during the print attempt), this may indicate a problem in sending print data from the host to the printer program.

Check the printer program’s `OBJECT_NAME` configuration directive, as suggested in the preceding subsection, **Printer Software Does Not Run**.

Restart the printer program with diagnostics enabled as described above, and look for diagnostic messages showing status `“sNOT_OPENED”` or `“sOPENED”` for the printer object. If the last such status displayed is `“sNOT_OPENED”` then the printer program may be having trouble connecting to the Gateway or using the printer object.

Check the status of the printer TA at the host. Reset the printer status at the Host if it is in a failed state. Verify that the printer is properly designated. Procedures to perform these tasks vary by airline host type and terminal command set. If necessary, obtain assistance from personnel familiar with the required airline terminal commands to designate, configure, and diagnose the status of the printer TA.

- 5) The Printer software has been configured using a TA which is not an available Printer TA. It may be a CRT TA, or a TA that is not available from the host.

Confirm that the Printer’s Object name corresponds to a TA which is defined at the Gateway as a type “Printer”, not CRT. Confirm with the Airline Help Desk that the TA you have been assigned is defined at the Host as a printer and is available to you.

Printer Software Will Run, But Only Partial Data Prints

Some possible reasons why incomplete or partial printouts may appear on a printer controlled by the printer program:

1) Improper cabling or configuration.

Check the cabling, and the relevant configuration parameters for your printer, as described earlier — see items (1) and (2) in the preceding subsection. In particular, check flow-control and online-detection settings, and verify that the cable connects the necessary signal pins to establish online/offline detection (DCD or DSR) and ready/busy (RTS/CTS) flow control if they are required.

2) Wrong End Of Message character being used.

Clue: The host sends the first segment of a multi-segment message, but no subsequent segment(s). The first block may or may not print; and subsequent segments do not print.

Verify that the “End Of Message” characters specified in the `FINAL_EOMS` directive (or the defaults if you are not using that directive) are correct for the airline host to which you are connecting.

Printer Prints Unexpected Characters or Spaces

Possible reasons why unexpected characters may appear in printouts:

1) For a directly connected serial printer, the `BAUD_RATE`, `PARITY`, `STOP_BITS`, or `CHARACTER_SIZE` parameters may not be set correctly.

Check these parameters as suggested in the earlier subsection “**Printer Software Will Run, But Printer Does Not Print**”.

Also refer to that subsection for additional items to check for a Windows printer accessed through a `SPOOL...` directive.

2) The `HASH_TOTAL`, `BLOCK_NUMBERING`, or `BLANK_COMPRESSION` parameters may not be set correctly. If these directives apply to your host type (such as EgyptAir), verify the correct parameter values as required by the host and the printer.

Print-to-Disk Function Does Not Work Properly

Possible reasons why the Print-to-Disk function can fail:

- 1) The `FILE_NAME` directive may be incorrectly specified or not specified. Verify that it specifies a valid file name.
- 2) Also check the printer program's `OBJECT_NAME` configuration directive as suggested in the earlier subsection, **“Printer Software Does Not Run”**.
- 3) There may be a problem in delivering messages from the host to the printer. Check items (4) and (5) in the earlier subsection, **“Printer Software Will Run, But Printer Does Not Print”**.

Note:

The error message “Close of Temporary File fd:-2 failed with errno:9” may appear in the printer program window if diagnostics are enabled. That message does not indicate a significant error, and should be ignored.

Appendix D — Determining the TCP/IP Service Name

The TCP/IP “**service name**” is the name associated with a TCP/IP network “port number” which the printer program uses in order to connect to the Gateway. This name is usually `ialcserver` in typical installations (usually associated with TCP/IP port #1413). For some installations the required service name is different.

If you have already installed and configured WinIATE terminal software on the PC and verified its connection to the Gateway, you may find the service name in the terminal’s Link Configuration item under the File menu.

If the required name is not already known from WinIATE configuration or other information, the following procedure may be used to determine the correct name for connection to an NT or UNIX gateway. The procedure for a Mac gateway with IATEtcp is somewhat different and is not documented here — refer to Mac gateway and IATEtcp documentation, and contact InnoSys for assistance if necessary.

This procedure is relatively complex. Users unfamiliar with TCP/IP **services** files and their contents may wish to consult network personnel or InnoSys tech support if assistance is required in making a successful connection to the Gateway.

If you already have a working service name from WinIATE configuration or other information, then you probably do not need to follow this procedure.

Detailed Procedure to Determine the TCP/IP Service Name for an NT or UNIX Gateway connection

1. Find the service name specified in the IATE Gateway’s configuration.
 - You’ll need to locate the configuration file being used with the Gateway. That is the file specified in the `-filename` option on the Gateway (`iate_server`) command line.
 - The file *may* contain a line similar to the following:

```
SERVER_NAME    ialcserver
```

If the `SERVER_NAME` line is present, take note of the name it specifies, whether it is `ialcserver` or some other name.
 - If there is *no such line* in the Gateway configuration file, do not add one. The service name `ialcserver` takes effect by default.

Take note of the *service name* that you have just determined.

2. Locate the **services** file or database on the NT or UNIX Gateway system.

- If the Gateway is on a Windows NT PC, the **services** file is located in a subdirectory beneath the main Windows NT directory. The file can be found easily through the `%SystemRoot%` variable, as follows:

`%SystemRoot%\system32\drivers\etc\services`

Note: Some Windows systems may contain multiple **services** files. It's important to locate the correct file, as described above.

- If the Gateway is on a UNIX system, there should be a file named `/etc/services` file on that system.

You'll need to find out whether or not the UNIX system uses an **NIS database** (or any other remote network services database) to find TCP/IP service names and port numbers. If so, you'll need to access the database instead of the `/etc/services` file. This document does not describe the procedure to check the network services database.

3. Locate the `ialcserver` or similar entry in the **services** file (or services database), matching the name you determined in Step 1 above.

- The **services** file may contain line(s) similar to the following:

```
ialcserver 1413/tcp
```

Look specifically for a line containing the *service name* you found in Step 1. Take note of the *port number* on that line (such as 1413).

4. Locate the TCP/IP **services** file on the PC where the printer program is installed.

- If the printer program is installed on a Windows NT PC:
The **services** file is located in a subdirectory beneath the main Windows NT directory. The file can be found at this location:
%SystemRoot%\system32\drivers\etc\services
(Note: The "%SystemRoot%" part of the file-path shown above is a special notation which automatically refers to the main Windows NT directory — which may be c:\winnt40 for NT Workstation 4.0, or some other directory for other versions of NT.)
- If the printer program is installed on a Windows 95 system:
The **services** file may be located in **c:\windows\services**
- On a Windows 3.1, 3.11, or Windows for Workgroups system:
The **services** file should be located in a directory associated with the TCP/IP stack. If you are using the Microsoft TCP/IP stack with Windows for Workgroups, the **services** file may be located at **c:\windows\services**. If you are using a third-party TCP/IP stack, you'll need to locate its **services** file: For example, a Trumpet Winsock stack might use **c:\trumpet\services**; or a Sun PC/NFS stack might use **c:\nfs\services** or **c:\pcnfspro\etc\services**. Other vendors' stacks will use other locations.

Note: Some Windows systems may contain multiple **services** files; it's important to locate the correct file which is in active use.

5. Edit the **services** file on the PC where the printer program is installed.

- Check for a line in the PC's **services** file specifying the same port number (such as 1413) that you found in Step 3 above. It may have the same or different *service name* (such as ialcserver). Take note of the *service name*.
- If the **services** file does not contain a line specifying the same *port number* that you found in Step 3, then it is necessary to *add* such a line to the file. Again it should have the same format as other lines in the file, for example:

```
ialcserver      1413/tcp
(or other name) (or other port number>
```

Be sure to use the *port number* you found in Step 3.
You can specify the same *service name* you used in the Gateway machine's **services** file (recommended), or you can use `ialcserver` instead.
Take note of the *service name* you chose.

The *service name* you determined in Step 4 is the one you'll need to use in the printer program's OBJECT_NAME configuration parameters, as discussed in the **Configuration Directives** section.

IATE™

**InnoSys Airline Terminal Emulator
for Windows®**

**Printer Software
Reference Manual**

- 16-bit release version
- 32-bit beta version

November 1998

Copyright © 1998

InnoSys
INCORPORATED

3095 Richmond Parkway, Suite 207
Richmond, CA 94806
+1 510 222-7717

This manual and the software described in it are copyrighted, with all rights reserved. Under the copyright laws, this manual or the software may not be copied, in whole or in part, without the written consent of InnoSys Incorporated.

NO WARRANTIES OF ANY KIND ARE EXTENDED BY THIS DOCUMENT.

The information herein and the IATE™ products themselves are furnished only pursuant to and subject to the terms and conditions of a duly executed Product License.

INNOSYS SPECIFICALLY DISCLAIMS ALL WARRANTIES, WHETHER IMPLIED OR EXPRESSED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. InnoSys has no responsibility, financial or otherwise, for any result of the use of this document and/or the associated product, including direct, indirect, special and/or consequential damages. The information contained herein is subject to change without notice.

Microsoft, Windows, MS, and MS-DOS are registered trademarks of Microsoft Corporation. Sun, Sun Workstation, Solaris, Sun OS, and S-Bus are trademarks or registered trademarks of Sun Microsystems, Inc. SPARC is a registered trademark of SPARC International, Inc. Apple, AppleTalk, ImageWriter, LaserWriter, Mac, and Macintosh are trademarks of Apple Computer, Inc., registered in the United States and other countries. TrueType, Finder, MultiFinder, and HyperCard are trademarks of Apple Computer, Inc. NuBus is a trademark of Texas Instruments Corporation. UNIX is a trademark registered in the United States and other countries, licensed exclusively through X/Open Company, Ltd.

IATE is a trademark of InnoSys Incorporated. Copyright © 1990-1998 InnoSys Incorporated.

InnoSys Incorporated
3095 Richmond Parkway, Suite 207
Richmond, CA 94806
(510) 222-7717 Voice
(510) 222-0323 FAX
info@innosys.com

Contents

Introduction	1
Overview	1
Upgrade Information	2
Requirements	2
Preparation	3
The LAN/WAN	4
The Gateway Host Name, Service Name, and Printer Object Name	5
The Gateway Host Name	5
The TCP/IP Service Name	6
The Printer Object Name	6
Installing the Printer Software	7
Important Notes concerning the 16-bit and 32-bit versions	8
Command-Line Options	9
Configuring the Printer Software	11
Configuration Files	11
Configuration Directives	12
Local and Remote Printers	13
Local Printers	13
Remote Printers	14
More Information about Spooled Printing	14
Which Configuration Directives are Required?	15
Required <i>Object Connection</i> Directives	15
Required <i>Printer Connection</i> Directives	16
List of Configuration Directives	17
Object Connection Directives	17
“Spooling” Directives <i>for printing to Windows printers</i>	20
Serial Connection Directives <i>for printing directly through a serial port</i>	23
Flow-Control Directives <i>for serial printer connections</i>	29
Print-to-Disk Directives	30
Carriage Return / Line Feed (CR/LF) Directives	31
General Output-Formatting Directives	33
Window-Control Directive	34
TAB Expansion Directives <i>for Apollo host connections</i>	35
Special Directives <i>for Air New Zealand host connections</i>	36
Special Directives <i>for other host types</i>	37
Message Notation Directives	39
Special Print-Control Directives <i>to set orientation, font, etc.</i>	40
Special Directives <i>for use with ATB & ATB2 Printers.</i>	46
Menus	54
The File Menu	54
The Edit Menu	55
The Options Menu	56
The Help Menu	58
Appendix A: Printer Cabling	59
Appendix B: Sample Printer Configuration files	60
Appendix C: Printer Program Troubleshooting	63
Appendix D: Determining the TCP/IP Service Name	69